

Breezeline Stream TV Remote Essentials

 
**For Standard and Multifunction
Stream TV remotes**

Standard Stream TV Remote

The Fast Forward, Rewind, and Pause/Play functions will appear on your TV screen. Use the middle buttons (OK/Select, LEFT, RIGHT) on your remote control to operate those on-screen functions while watching video.


Tip

- Push the EXIT button while watching Live TV to go to the Last Channel you viewed.
- Push the INFO (**i**) button while watching Live TV to Record the show you are watching (Cloud DVR service required).

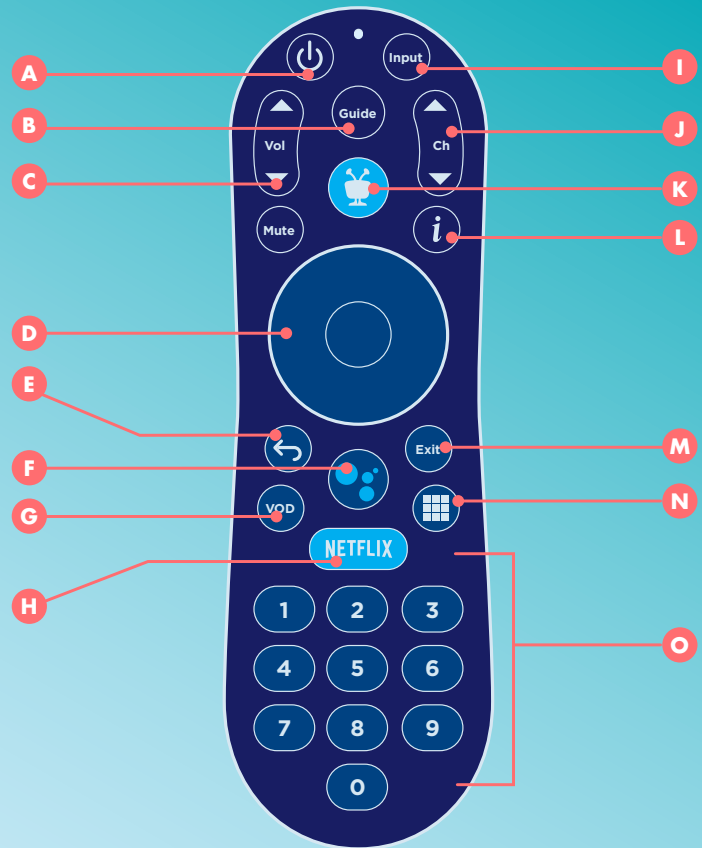

- A** POWER turns the television on/off.
- B** GUIDE takes you to the program guide.
- C** VOL and MUTE control the TV audio.
- D** While navigating the TiVo menus:
 - Use UP, DOWN, LEFT, or RIGHT to move around the screen.
 - The center button (OK/Select) chooses menu items.
 - While watching video:
 - DOWN displays the Info banner.
 - UP opens the mini guide.
 - OK/SELECT brings up Trick Play controls. With Trick Play controls visible:
 - DOWN opens the Continue Watching and Favorite Channels panels.
- E** BACK starts full-screen video on the Home screen, and goes back to the previous screen on other menus.
- F** Press and release the Google Assistant button to talk to Google.
- G** VOD goes directly to the On Demand library.
- H** The NETFLIX button launches Netflix.
- I** INPUT changes your video source (Stream TV Box, gaming, etc).
- J** CH UP/DOWN changes the channel or moves you quickly through the lists and the guide.
- K** The TiVo button takes you to the Home Screen.
- L** INFO (**i**) brings up the full Info banner while watching a show with options to Record, Bookmark, Change Audio Track, etc.
- M** EXIT switches to full-screen video while using TiVo menus, or jumps back to the LAST CHANNEL viewed while watching live TV. Exit also exits a Start Over/Catch Up show.
- N** The grid button jumps to the Apps & Games screen.
- O** The NUMBER BUTTONS make it easy to enter numbers (e.g., channel numbers or Parental Controls PIN).

 Multifunction Stream TV Remote

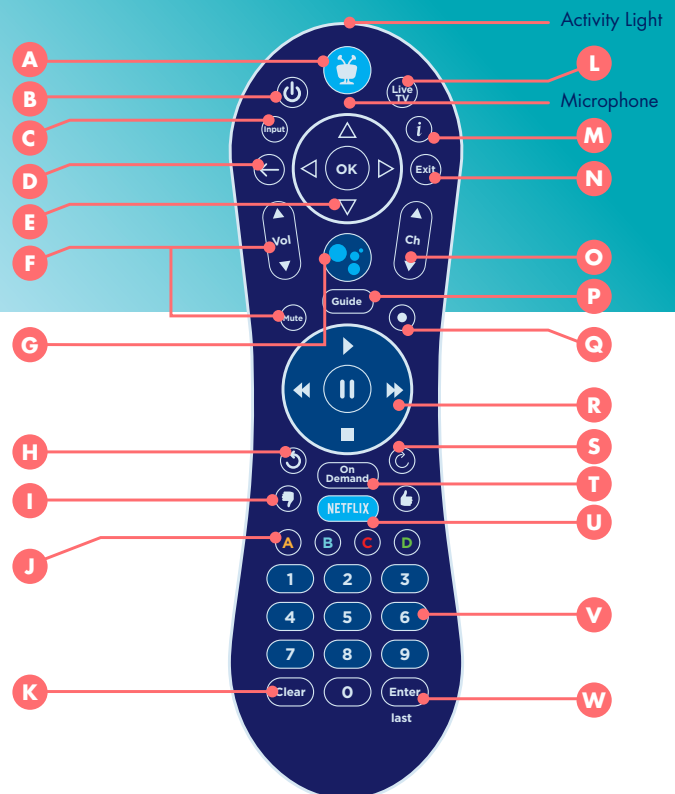

- A** The TIVO BUTTON takes you to the Home screen.
- B** POWER button turns the TV on or off.
- C** INPUT selects the input for your TV.
- D** BACK goes back to the previous screen.
- E** Use the ARROW BUTTONS when watching video:
 - Press OK to bring up TrickPlay controls, then press DOWN to display the Continue Watching panel, and press DOWN again to display the Favorite Channels panel.
 - Press UP to bring up the mini guide and press DOWN to see the full Info banner.
- F** VOLUME and MUTE control the volume on your TV.
- G** Press and release the Google Assistant button to use Voice Search.
- H** REPLAY repeats the last eight seconds of the show. In the Guide, REPLAY jumps 24 hours back.
- I** Use the THUMBS UP and THUMBS DOWN confirm certain commands, as instructed on screen.
- J** Use the **A, B, C, D** buttons as instructed when they are displayed on the screen.
 - When watching live TV, the **A** button will turn Screen Reading on/off (if available) and the **B** button will turn Closed Captions on/off.
 - When in the Guide, the **C** button will bring up Channel Options where you can change the Guide from All channels to Favorites or vice versa.
- K** CLEAR dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.
- L** LIVE TV takes you to live TV.
- M** INFO (**i**) shows the Info banner while watching a show, or brings up an Info card when a title is highlighted in the TiVo menus. Press and hold for accessibility options.
- N** Use EXIT to switch to full-screen video while using TiVo menus, or to jump back to the last channel viewed while watching live TV. Exit also exits a Start Over/Catch Up show.
- O** Use CHANNEL UP/DOWN to change the channel or move quickly through the Guide.
- P** GUIDE takes you to the on-screen Guide.
- Q** Press RECORD to record the show you're watching, or to set up a recording for a show selected in the guide.
- R** Use the TrickPlay buttons (REWIND, FAST-FORWARD, STOP, PAUSE, and PLAY) to control video.
- S** ADVANCE jumps forward 30-seconds. In the Guide, ADVANCE jumps forward 24 hours.
- T** ON DEMAND jumps to the On Demand catalog.
- U** The NETFLIX button launches the Netflix app.
- V** Use the NUMBER BUTTONS to directly enter numbers (e.g., channel numbers or Parental Controls PIN).
- W** Press ENTER/LAST to jump back to the last channel viewed while watching live TV.

 
 
Installing Stream TV for the First Time (new box, new remote)

1. You should see the screen below during First Time Installation (FTI).
2. Press the TIVO button to start the pairing process.
3. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.



Re-pairing your Remote to your Stream TV box (existing box, existing or new remote)

1. If you change your Stream TV remote or for any reason it becomes unpaired, press the TIVO and BACK buttons simultaneously until the indicator light turns RED.
2. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.
3. If a list of remotes appears on the screen, use the directional pad to highlight the remote and press OK/SELECT to choose the remote and pair it.

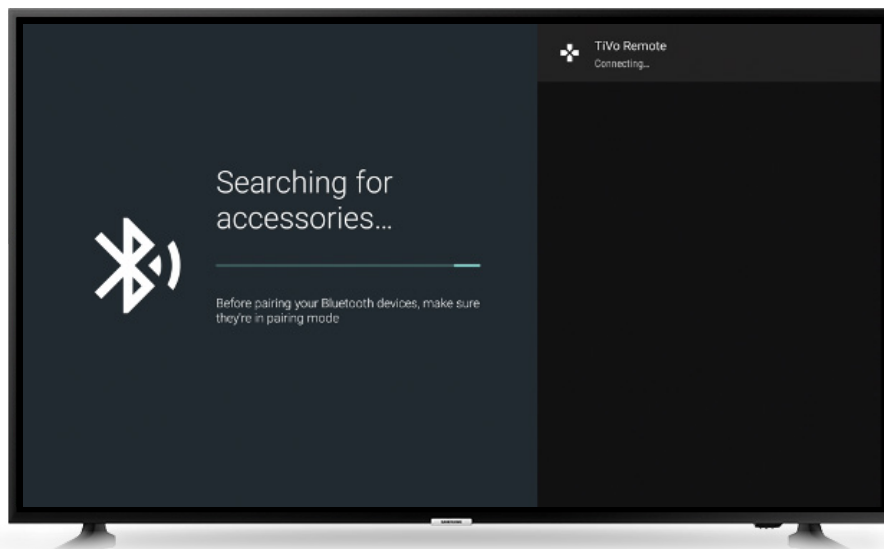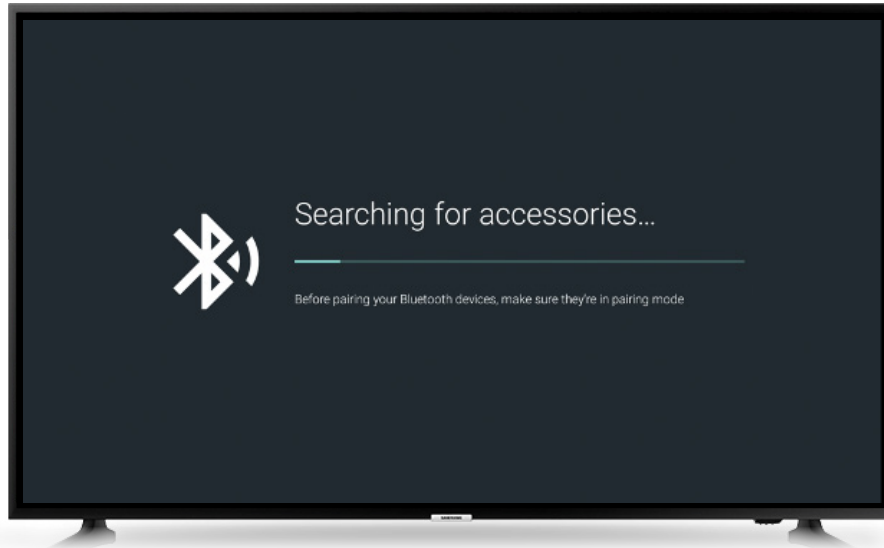

Reset & Re-Pair Your Remote

1. Press and hold the TIVO and POWER buttons on the remote simultaneously for approximately 3 seconds, until the activity light turns solid red. Note: If you don't press the buttons exactly at the same time, you may see the activity light flash yellow or yellow/red instead. Try again after the light stops flashing.
2. Press VOLUME DOWN three times.
3. Press the TIVO button.
4. The activity light will flash red three times.
5. Remove the batteries from the remote for at least 10 seconds.

The remote is now reset and can be paired with your Stream TV box

6. Insert the batteries into the remote.
7. Press the TIVO button to start the pairing process.
8. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.



Controlling your TV power and volume with your Stream TV Remote

1. Go to Menu > Settings > Remote Settings > Remote Control Programming
2. Choose "Set up TV" and choose your TV manufacturer from the list (the channel up/down buttons can be used to scroll faster)
3. Follow the on-screen instructions to begin testing code #1
4. If code #1 works, you're done! Otherwise, try additional codes until you find one that works for you.

Note: If you notice odd behavior after programming the remote, you can always go back to this screen and select "No, try next code" and try a different code.



Thanks for Choosing Breezeline

