

The **TiVo** **BUTTON** takes you to the Home screen.

Use the **ARROW** buttons to navigate the TiVo menus. In live TV or recordings, the arrow buttons reveal QuickView panels.

Press and hold the **VOICE** button to issue voice commands.

GUIDE takes you to the on-screen program guide.

REPLAY repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

Use the **THUMBS UP** and **THUMBS DOWN** buttons to rate shows to influence which shows get recorded as TiVo Suggestions.

The **A, B, C** buttons set options and sort and filter views. Look for on-screen tips.

CLEAR lets you quickly delete shows

LIVE TV takes you to Live TV.

Press Record to **RECORD** the show you're watching, or to set up a recording for a show selected in the guide.

ON DEMAND & DVR CONTROLS You can Play, Fast Forward, Slow, Rewind and Pause.

ADVANCE moves forward in 30 second increments; press and hold to jump to the end of the show.

Press **ON DEMAND** to go directly to Breezeline On Demand.

Press the **NETFLIX** button to launch the Netflix app.

ENTER/LAST returns to the last channel viewed.



Your remote may vary slightly from the one pictured here, but the basic functions should remain the same. Some features may not be available in all areas.